

## Technical specification for FY type submerged pump

141.1 Before you start Note:

141.1.1 The direction of rotation of the motor must be checked before starting or after the initial start-up. It should be rotated clockwise from the motor side.

141.1.2 The pump impeller part should be immersed in the medium.

141.1.3 Check the filling volume of the butter in the bearing cavity, generally 1 / 2-1 / 3 of the oil chamber.

141.1.4 turbo coupling, should feel the weight of uniform, no card astringent phenomenon, or can not start.

141.1.5 Close the pump outlet valve and pressure gauge, if necessary, seal the cooling water.

141.2 start and run:

141.2.1 Turn on the power switch, start the device, open the pressure gauge, slowly open the outlet pipe valve put into operation.

141.2.2 equipment in the bearing temperature ? 75 degrees, if necessary, to replace or fill the bearing cavity grease.

141.2.3 check the operation of equipment at any time, found that noise, vibration, fever and other abnormalities should be immediately stop processing.

141.3 Parking:

Should first close the outlet valve, and then stop the motor, close the pressure gauge.